

Antique Hardwood w/ Brass Brush for Removal of Spring/Soft Grain

Creates a Weathered or Barn Look

New Floor - Remove Spring Grain to get the Old Floor Look

Kerf Cut - Use the Brass Brush to Soften the Kerf

Heavy Distressed - Softens and Blends Scratches and Gouges



Pro Brass Brush
KA1638

Pro Brass Brush is the culmination of 15 years manufacturing tools to remove spring grain.

- 10 Times the amount of wires per brush
- Brushes are 100% Pure Brass - No problems with water based finish
- 2 years Research to determine Gauge & Crimp
- Designed Exclusively for the Satellite
- Fits Our Satellite - No Special Adapters or Tools



Old Style Economy Brass Brush Use for Antiquing / Grain removal for the past 12 yrs. w/ KA1569 Adapters & Satellite KA1634

“How to” Directions: Best results - Mount 6 Pro Brass Brushes to a Satellite Planetary with Standard 175 rpm Floor Machine. Start by brushing with the direction of the wood, overlap 50%. Finish working across the boards overlapping 50%. I prefer not using dust control so I can see the amount of wood removed.

Directions For Large Areas or Harder Species: Isolate a small area (8x8). Spray lightly with water, approximately 64 ounces (2 quarts). Let it soak in 5-6 minutes. Begin to buff in the direction of the boards overlapping 50%. Then buff across the boards overlapping 50%. The water will soak into the Soft Grain making it easier to remove & minimizing Cross Grain Scratches. Most of the water will be removed with the soft grain. The remaining water will evaporate. (For BEST results use a Carpet Fan). Moisture content equivalent to standard water pop floor within 1 hour. When finished use 2 white pads with 220 grit Finishrite Strips and buff the floor. Waterpop the floor. Go to lunch, come back and buff down any grain raise with a Maroon Pad (360 Grit). Tack & Finish

NOTE ALWAYS start/stop the brushes on a piece of 1/8" masonite or formica. NEVER let the machine sit on the brushes when not in use. MONITOR your work closely, if you slow down or speed up it will show up in the floor. ALWAYS use 6 brushes!

100's of Additional Floor Prep Tools for Wood

REMOVE Cut Back, Glue, Paint, Dried Adhesives, Thinset, Mortar, Epoxy, Urethane & Thin Coatings, Carpet & Tile Adhesives, Elastomers, Tar & Rubber




Scraper Disc
Carbide Blades removes adhesives, paint, epoxy, and coatings.
KA1615



Needs KA1659 5/8" Adapter

4" Arrow Cup
Arrow shaped segments for aggressive stock removal, adhesives and coatings
KA1950

REMOVE Glue, Mastic, Tar, Epoxy, Gummy Adhesives, Cut Back, Chips out Mortar Beds, Rust, Carpet Padding, Paint, Sealers and Thinset

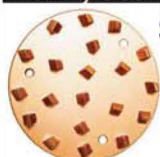

Shredder Discs
1/4" or 1/8" Premium Quality Pyramidal Carbide welded to 4" Metal Plate. Durable, Long lasting.
KA1610



Needs KA1659 5/8" Adapter

4" PCD Cup
Poly Crystalline Diamonds for Extremely Aggressive Removal of Glue, Epoxy etc.
KA1640

GRIND Concrete, Thinset, Granite, Marble, etc. Great for profiling Concrete, Coating, Adhesives, Moisture Barriers. Reduce Lippage, Cracks and High Spots




Red Devil
24-30 grit Diamonds imbedded in a metal bond. Levels Concrete as it grinds
KA1618



Diamond Grind
Exposed Diamonds for Fast Heavy Stock-High Spots, & Lippage Removal.
KA1613-Grit

GRIND Concrete, Thinset, Mortar. Eliminate Broom Marks. Profile concrete prior to Adhesive & Moisture Barriers, cuts fast at the Lowest Cost per sq. ft.

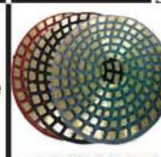

Z Spikes
Metal Bond Diamonds with Beveled Edge. Flexible for Lippage, and Tool Mark removal. Grits 6, 16, 30, 50, 100.
KA110-Grit



Needs KA1659 5/8" Adapter

4" Diamond Cup "G"
Premium "L" pattern segments for better cutting and speed with minimal swirl.
KA2200